

---

# General Information

---

Vehicle Identification Number (VIN):

Owner Name: \_\_\_\_\_

Address: \_\_\_\_\_  
\_\_\_\_\_

Phone: \_\_\_\_\_

---

Selling Dealer Name: \_\_\_\_\_

Address: \_\_\_\_\_  
\_\_\_\_\_

Phone: \_\_\_\_\_

If you live in the U.S. and have questions or concerns that the dealership cannot answer, contact:

Ford Motor Company  
Customer Assistance Center  
300 Renaissance Center  
P.O. Box 43360  
Detroit, MI 48243  
1-800-392-3673 (FORD)  
TDD for the hearing impaired: 1-800-232-5952

If you live in Canada, contact:

Customer Assistance Centre  
Ford Motor Company of Canada, Limited  
P.O. Box 2000  
Oakville, Ontario L6J 5E4  
1-800-565-3673 (FORD)

If you live outside the U.S. or Canada, contact:

FORD MOTOR COMPANY  
WORLDWIDE EXPORT OPERATIONS  
1555 Fairlane Drive  
Fairlane Business Park #3  
Allen Park, Michigan 48101 U.S.A.  
Telephone: (313) 594-4857  
Fax: (313) 390-0804

---

# Table of Contents

---

<b>Maintenance Schedule and Record .....</b>	<b>3</b>
<b>General Maintenance Information .....</b>	<b>4</b>
Maintenance: An investment .....	4
No Cost PCV Valve Replacement .....	4
<b>What Maintenance Schedule Do You Follow? .....</b>	<b>5</b>
<b>Normal Schedule .....</b>	<b>6</b>
<b>Severe Duty Schedule .....</b>	<b>18</b>
<b>Owner Maintenance Checks .....</b>	<b>38</b>

---

All rights reserved. Reproduction by any means, electronic or mechanical, including photocopying, recording, or by any information storage or retrieval system or translation in whole or part is not permitted without written authorization from Ford Motor Company.

Copyright © 1996 Ford Motor Company

---

---

# Maintenance Schedule and Record

---

## Maximum Oil Change Interval. . .

Normal Schedule: 5,000 miles (8,000 km) or 6 months, whichever occurs first.

Severe Duty Schedule: 3,000 miles (5,000 km) or 3 months

See appropriate Schedule.

## General Maintenance Information

The required Scheduled Maintenance Services listed in this booklet are considered essential to the proper operation, safety and performance of your Ford Motor Company vehicle. We recommend that you also perform the Owner Maintenance Checks listed. These services are matters of day-to-day care that are also important to the proper operation of your vehicle. The recommended lubricants, fluids and service parts conforming to Ford Specifications are available from your dealer.

This booklet gives you a place to record the services that are performed on your vehicle so that you can keep a record of when parts should be checked or replaced. Give your *Maintenance Schedule* booklet to the dealer service manager.

### **Maintenance: An investment**

**An investment which will pay dividends in the form of improved reliability, durability, and resale value.**

To assure the durability of your vehicle and its emission control systems, it is necessary that scheduled maintenance be performed at the designated intervals.

Ford strongly recommends the use of genuine Ford replacement parts. If other than Ford or Motorcraft parts or Ford authorized remanufactured parts are used for maintenance replacements or for the service of components affecting emission control, such non-Ford parts should be equivalent to genuine Ford Motor Company parts in performance and durability. It is the owner's responsibility to determine the equivalency of such parts. Please consult your warranty booklet for complete warranty information.

**No Cost PCV Valve Replacement  
(Excluding 3.8L engines)**

**THE PCV VALVE IS A CRITICAL EMISSION COMPONENT. YOUR DEALER WILL REPLACE THE VALVE AT NO COST AT 60,000 MILES/96,000 KILOMETERS (EXCEPT CANADA AND CALIFORNIA VEHICLES).**

---

**PRE-DELIVERY CHECK**

---

Pre-Delivery Service Inspection Completed

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

# What Maintenance Schedule Do You Follow?

---

## Normal Schedule

Follow the Normal Schedule for most normal everyday driving conditions.

## Severe Duty Schedule

Follow the Severe Duty Schedule if your driving habits **FREQUENTLY** include one or more of the following conditions:

- Towing a trailer.
- Operating in severe dust conditions.
- Extensive idling, such as police, taxi or door-to-door delivery service.
- Short trips of **less** than 10 miles (16 km) when outside temperatures remain below 0°F (-18°C).

---

# Normal Schedule

---

*NOTE: Items for Emission Control Service are shown in this type and style.*

For items marked with a number in parentheses such as (1), see footnote at the end of this section.

**NOTE: Rear axle lube quantities must be replaced every 100,000 miles (160,000 km) or if the axle has been submerged in water. Otherwise, the lube should not be checked or changed unless a leak is suspected or repair required.**

## Regular Maintenance Intervals for the Normal Schedule

---

### 5,000 MILES (8,000 Kilometers)

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**10,000 MILES (16,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**15,000 MILES (24,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**20,000 MILES (32,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**25,000 MILES (40,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**30,000 MILES (48,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Replace air cleaner filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).
- Change automatic transmission fluid.
- Inspect exhaust heat shield(s).

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_



---

**35,000 MILES (56,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**40,000 MILES (64,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**45,000 MILES (72,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**50,000 MILES (80,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Change engine coolant initially at 50,000 miles (80,000 km) or 48 months. Thereafter, change engine coolant every 30,000 miles (48,000 km) or 36 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**55,000 MILES (88,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**60,000 MILES (96,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Inspect accessory drive belts.*
- Replace air cleaner filter.*
- Replace PCV valve — all 4.6L engines only. (2)*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*

---

**10 Normal Schedule**

- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).
- Change automatic transmission fluid.
- Inspect exhaust heat shield(s).
- Inspect front and rear brakes. (1)

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**65,000 MILES (104,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**70,000 MILES (112,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**75,000 MILES (120,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**80,000 MILES (128,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Change engine coolant every 30,000 miles (48,000 km) or 36 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**85,000 MILES (136,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**90,000 MILES (144,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Inspect accessory drive belts.*
- Replace air cleaner filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).
- Change automatic transmission fluid.
- Inspect exhaust heat shield(s).
- Inspect front and rear brakes. (1)

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**95,000 MILES (152,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**100,000 MILES (160,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Inspect accessory drive belt(s) — 4.6L (4V) engines only.*
- Replace spark plugs.*
- Replace PCV valve — 3.8L engines only.*
- Replace rear axle lubricant.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**105,000 MILES (168,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**110,000 MILES (176,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Change engine coolant every 30,000 miles (48,000 km) or 36 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**115,000 MILES (184,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**120,000 MILES (192,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Inspect accessory drive belts.*
- Replace air cleaner filter.*
- Replace PCV valve — all 4.6L engines only. (2)*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Check clutch pedal operation (if equipped).*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Change automatic transmission fluid.*
- Inspect exhaust heat shield(s).*
- Inspect front and rear brakes. (1)*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_



- (1) If your driving habits include continuous stop-and-go driving or driving in hilly areas, more frequent intervals may be required.
- (2) At 60,000 miles (96,000 km) your dealer will replace the PCV valve at no cost except on Canada and California vehicles.

---

# Severe Duty Schedule

---

*NOTE: Items for Emission Control Service are shown in this type and style.*

For items marked with a number in parentheses such as (1), see footnote at the end of this section.

**NOTE: The Severe Duty Schedule provides maintenance intervals for replacing your air cleaner filter if you drive in severe dust conditions. However, the conditions you drive in may require even more frequent air cleaner replacement intervals than those shown. Check with your dealer.**

**NOTE: Rear axle lube quantities must be replaced every 3,000 miles (5,000 km) for non-synthetic fluid or 100,000 miles (165,000 km) for synthetic fluid or if the axle has been submerged in water. Otherwise, the lube should not be checked or changed unless a leak is suspected or repair required.**

Maintenance  
Intervals  
for Severe  
Duty Schedule

---

**3,000 MILES (5,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**6,000 MILES (10,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**9,000 MILES (15,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**12,000 MILES (20,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Replace rear axle lubricant.*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**15,000 MILES (25,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Replace rear axle lubricant.*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**18,000 MILES (30,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**21,000 MILES (35,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.
- Change automatic transmission fluid.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

---

**24,000 MILES (40,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

---

**27,000 MILES (45,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

---

**30,000 MILES (50,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Replace air cleaner filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

- Replace rear axle lubricant.
- Inspect exhaust heat shield(s).
- Inspect front and rear brakes. (1)

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**33,000 MILES (55,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**36,000 MILES (60,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**39,000 MILES (65,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**42,000 MILES (70,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.
- Change automatic transmission fluid.
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_



---

**45,000 MILES (75,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Replace rear axle lubricant.*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**48,000 MILES (80,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Change engine coolant initially at 48,000 miles (80,000 km) or 48 months. Thereafter, change engine coolant every 30,000 miles (50,000 km) or 36 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Replace rear axle lubricant.*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**51,000 MILES (85,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**54,000 MILES (90,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**57,000 MILES (95,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**60,000 MILES (100,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Replace spark plugs.*
- Inspect accessory drive belts.*
- Replace air cleaner filter.*
- Replace PCV valve — all 4.6L engines only. (2)*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Replace rear axle lubricant.*
- Inspect exhaust heat shield(s).*
- Inspect front and rear brakes. (1)*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**63,000 MILES (105,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.
- Change automatic transmission fluid.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**66,000 MILES (110,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**69,000 MILES (115,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**72,000 MILES (120,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**75,000 MILES (125,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Replace rear axle lubricant.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**78,000 MILES (130,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Change engine coolant every 30,000 miles (50,000 km) or 36 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Replace rear axle lubricant.*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**81,000 MILES (135,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**84,000 MILES (140,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.
- Change automatic transmission fluid.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**87,000 MILES (145,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**90,000 MILES (150,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Inspect accessory drive belts.*
- Replace air cleaner filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.
- Inspect exhaust heat shield(s).
- Inspect front and rear brakes. (1)

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_



---

**93,000 MILES (155,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**96,000 MILES (160,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**99,000 MILES (165,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**100,000 MILES (160,000 Kilometers)**

---

- Replace PCV valve — 3.8L engines only.*

---

**102,000 MILES (170,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Replace rear axle lubricant.*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**105,000 MILES (175,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Replace rear axle lubricant.*
- Change automatic transmission fluid.*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**108,000 MILES (180,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Change engine coolant every 30,000 miles (50,000 km) or 36 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**111,000 MILES (185,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**114,000 MILES (190,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**117,000 MILES (195,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace rear axle lubricant.

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

---

**120,000 MILES (200,000 Kilometers)**

---

- Change engine oil and replace oil filter.*
- Replace spark plugs.*
- Inspect accessory drive belts.*
- Replace air cleaner filter.*
- Replace PCV valve — all 4.6L engines only. (2)*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*

Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

Replace rear axle lubricant.

Inspect exhaust heat shield(s).

Inspect front and rear brakes. (1)

DEALER AUTHORIZATION

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

- (1) If your driving habits include continuous stop-and-go driving or driving in hilly areas, more frequent intervals may be required.
- (2) At 60,000 miles (96,000 km) your dealer will replace the PCV valve at no cost except on Canada and California vehicles.

---

# Owner Maintenance Checks

---

The following lists are vehicle checks and inspections that should be performed by the owner or qualified service technician at the frequencies indicated to help ensure safe, dependable operation of your vehicle.

Any adverse conditions should be brought to the attention of your dealer or qualified service technician for service advice as soon as possible.

These Owner Maintenance Checks are generally not covered by warranties and you may be charged for labor, parts and lubricants used.

---

## When You Stop for Fuel:

---

- Check the engine oil level.
- Check coolant level in the coolant recovery reservoir.
- Check the windshield washer fluid level.
- Look for low or under-inflated tires.

---

## While Operating Your Vehicle:

---

- Note any changes in the sound of the exhaust or any smell of exhaust fumes in the vehicle.
- Check for vibrations in the steering wheel. Notice any increased steering effort or looseness in the steering wheel.
- Notice if your vehicle constantly turns slightly or “pulls” to one side of the road.

- When stopping, listen and check for strange sounds, **pulling to one side**, increased brake pedal travel or “hard to push” brake pedal.
- If any slipping or changes in the operation of your transmission occur, check the transmission fluid level.
- Check automatic transmission P (Park) function.
- Check parking brake.
- Check for fluid leaks under your vehicle (water dripping from the air conditioning system after use is normal).
- Check warning lights and gauges.

---

**At least monthly:**

---

- Check the tire pressure — check tires when cold, not after a long drive.
- Check coolant level in the coolant recovery reservoir.
- Check the operation of all exterior lamps, including the brakelamps, turn signals and hazard warning flashers.

---

**At least twice a year:  
(i.e., every Spring and Fall)**

---

- Check radiator, heater and air-conditioning hoses for leaks or damage.
- Check the power steering fluid level.
- Check windshield washer spray and wiper operation. Clean wiper blades with clean cloth dampened with washer fluid.
- Check for worn tires and loose wheel lug nuts.

- Check muffler, exhaust pipes, shields and clamps.
- Check headlamp alignment.
- Check the lap-shoulder belts for wear and function.
- Check air pressure in spare tire.
- Lubricate all hinges, checks, latches and all outside key locks.

---

**At least once a year:**

---

- Check engine cooling system, hoses and clamps and check coolant strength.
- Lubricate door rubber weatherstrips.
- Clean the body water drain holes.
- Check the air conditioning system before the warm weather season.
- Check the brake fluid level.
- Clean the battery connections.
- Lubricate the transmission controls and linkage.
- Check manual transmission fluid.

If any of these conditions are noted, bring them to the attention of your dealer or qualified service technician as soon as possible.