
General Information

Vehicle Identification Number (VIN):

Owner Name: _____

Address: _____

Phone: _____

Selling Dealer Name: _____

Address: _____

Phone: _____

If you live in the U.S. and have questions or concerns that the dealership cannot answer, contact:

Ford Motor Company
Customer Assistance Center
300 Renaissance Center
P.O. Box 43360
Detroit, MI 48243
1-800-392-3673 (FORD)
TDD for the hearing impaired: 1-800-232-5952

If you live in Canada, contact:

Customer Assistance Centre
Ford Motor Company of Canada, Limited
P.O. Box 2000
Oakville, Ontario L6J 5E4
1-800-565-3673 (FORD)

If you live outside the U.S. or Canada, contact:

FORD MOTOR COMPANY
WORLDWIDE DIRECT MARKET OPERATIONS
1555 Fairlane Drive
Fairlane Business Park #3
Allen Park, Michigan 48101 U.S.A.
Telephone: (313) 594-4857
Fax: (313) 390-0804

Table of Contents

Maintenance Schedule and Record	3
General Maintenance Information	3
Maintenance: An investment	4
No Cost PCV Valve Replacement (Excluding 3.8L engines)	5
What Maintenance Schedule Do You Follow?	6
Normal Schedule	7
Severe Duty Schedule	20
Owner Maintenance Checks	40

All rights reserved. Reproduction by any means, electronic or mechanical, including photocopying, recording, or by any information storage or retrieval system or translation in whole or part is not permitted without written authorization from Ford Motor Company.

Copyright © 1997 Ford Motor Company

Maintenance Schedule and Record

Maximum Oil Change Interval. . .

Normal Schedule: 5,000 miles (8,000 km) or 6 months, whichever occurs first.

Severe Duty Schedule: 3,000 miles (5,000 km) or 3 months

See appropriate Schedule.

General Maintenance Information

This Service Guide indicates the scheduled maintenance required for your vehicle. Proper maintenance guards against major repair expenses resulting from neglect or inadequate maintenance, and may help increase the value you receive when you sell or trade your vehicle.

It is your responsibility to make sure that all of the scheduled maintenance is performed and that the materials used meet Ford engineering specifications. Failure to perform scheduled maintenance, as specified in the Service Guide, will invalidate warranty coverage on parts affected by the lack of maintenance. Make sure that receipts for completed maintenance work are retained with the vehicle and confirmation of maintenance work is always entered in your Service Guide.

Your Ford or Lincoln-Mercury dealership, or Ford or Lincoln-Mercury Auto Care service center, has factory-trained technicians who can perform the required maintenance using genuine Ford Parts. The dealership looks forward to meeting your every service need to maximize your satisfaction with your vehicle.

Maintenance: An investment

Maintenance is an investment which will pay dividends in the form of improved reliability, durability, and resale value.

To assure the durability of your vehicle and its emission control systems, it is necessary that scheduled maintenance be performed at the designated intervals.

Ford strongly recommends the use of genuine Ford replacement parts. If other than Ford or Motorcraft parts or Ford authorized remanufactured parts are used for maintenance replacements or for the service of components affecting emission control, such non-Ford parts should be equivalent to genuine Ford Motor Company parts in performance and durability. It is the owner's responsibility to determine the equivalency of such parts. Please consult your "Warranty Information Booklet" for complete warranty information.

**No Cost PCV Valve Replacement
(Excluding 3.8L engines)**

**THE PCV VALVE IS A CRITICAL EMISSION
COMPONENT. YOUR DEALER WILL
REPLACE THE VALVE AT NO COST AT 60,000
MILES/96,000 KILOMETERS (EXCEPT
CANADA AND CALIFORNIA VEHICLES).**

PRE-DELIVERY CHECK

Pre-Delivery Service Inspection Completed

DEALER AUTHORIZATION

Date: _____

Mileage: _____

What Maintenance Schedule Do You Follow?

Normal Schedule

Follow the Normal Schedule for most normal everyday driving conditions.

Severe Duty Schedule

Follow the Severe Duty Schedule if your driving habits **FREQUENTLY** include one or more of the following conditions:

- Driving at top speeds for long distances during hot conditions.
- Short trips in areas of high humidity or freezing conditions.
- Towing and/or carrying heavy loads.
- Police, taxi and delivery usage.
- Driving in dusty/sandy environments for long periods.

Normal Schedule

NOTE: Items for Emission Control Service are shown in this type and style.

For items marked with a number in parentheses such as (1), see footnote at the end of this section.

Rear axle lube must be replaced if the axle has been submerged in water. Otherwise, the lube should not be checked or changed unless a leak is suspected or repair required.

Regular Maintenance Intervals for the Normal Schedule

5,000 MILES (8,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

10,000 MILES (16,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

15,000 MILES (24,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

20,000 MILES (32,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

25,000 MILES (40,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

30,000 MILES (48,000 Kilometers)

- Change engine oil and replace oil filter.*
- Replace air cleaner filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Change automatic transmission fluid.*
- Inspect exhaust heat shield(s).*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

35,000 MILES (56,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

40,000 MILES (64,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

45,000 MILES (72,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

50,000 MILES (80,000 Kilometers)

- Change engine oil and replace oil filter.*
- Change engine coolant initially at 50,000 miles (80,000 km) or 48 months. Thereafter, change engine coolant every 30,000 miles (48,000 km) or 36 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

55,000 MILES (88,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

60,000 MILES (96,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect accessory drive belts (3.8L engines only).*
- Replace air cleaner filter.*
- Replace PCV valve — 4.6L engines only. (2)*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Change automatic transmission fluid.*
- Inspect exhaust heat shield(s).*
- Inspect front and rear brakes. (1)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

65,000 MILES (104,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

70,000 MILES (112,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

75,000 MILES (120,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

80,000 MILES (128,000 Kilometers)

- Change engine oil and replace oil filter.*
- Change engine coolant every 30,000 miles (48,000 km) or 36 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

85,000 MILES (136,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

90,000 MILES (144,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect accessory drive belts (3.8L engines only).*
- Replace air cleaner filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Change automatic transmission fluid.*
- Inspect exhaust heat shield(s).*
- Inspect front and rear brakes. (1)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

95,000 MILES (152,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

100,000 MILES (160,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect accessory drive belt(s) — 4.6L engines only.*
- Replace spark plugs.*
- Replace PCV valve — 3.8L engines only.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

105,000 MILES (168,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

110,000 MILES (176,000 Kilometers)

- Change engine oil and replace oil filter.*
- Change engine coolant every 30,000 miles (48,000 km) or 36 months.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

115,000 MILES (184,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

120,000 MILES (192,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect accessory drive belts (3.8L and 4.6L engines).*
- Replace air cleaner filter.*
- Replace PCV valve — 4.6L engines only. (2)*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Check clutch pedal operation (if equipped).*
- Adjust clutch by lifting pedal every 5,000 miles (8,000 km).*
- Change automatic transmission fluid.*
- Inspect exhaust heat shield(s).*
- Inspect front and rear brakes. (1)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

- (1) If your driving habits include continuous stop-and-go driving or driving in hilly areas, more frequent intervals may be required.
- (2) At 60,000 miles (96,000 km) your dealer will replace the PCV valve at no cost except on Canada and California vehicles.

Severe Duty Schedule

NOTE: Items for Emission Control Service are shown in this type and style.

For items marked with a number in parentheses such as (1), see footnote at the end of this section.

NOTE: The Severe Duty Schedule provides maintenance intervals for replacing your air cleaner filter if you drive in severe dust conditions. However, the conditions you drive in may require even more frequent air cleaner replacement intervals than those shown. Check with your dealer.

NOTE: Rear axle lubricants must be replaced anytime the axle has been submerged in water.

Non-synthetic rear axle lubricants should be replaced every 3,000 miles or 3 months, whichever occurs first, during extended trailer tow operation above 21 degrees Celsius (70 degrees Fahrenheit) ambient and wide open throttle for extended periods above 45 m.p.h. The 3,000 mile lube change interval may be waived if the axle was filled with 75W140 synthetic gear lubricant meeting Ford Specification WSL-M2C192-A, part number F1TZ-19580-B or equivalent. Add 4 ounces of additive friction modifier C8AZ-19B546-A (EST-M2C118-A) or equivalent for complete refill of traction-lok axles. The axle lubricant should be changed anytime the axle has been submerged in water.

Police and Taxi Vehicles: Rear axle

lubricants must be replaced every 100,000 miles. This requirement may be waived if the axle was filled with Ford approved 75W-140 synthetic gear lubricant meeting material specification WSL-M2C192-A, Part Number F1TZ-19580-B or equivalent. Add 4-ounces of additive Friction Modifier C8AZ-19B546-A, Ford specification EST-M2C118-A, or equivalent for complete refill of Traction-Lok rear axles. The rear axle lubricant should be changed anytime the axle has been submerged in water.

Trailer Tow Operation: The rear axle lubricant must be changed every 3,000 miles or 3 months, whichever occurs first, during extended trailer tow operations above 70 degrees Fahrenheit ambient or wide open throttle for extended periods above 45 mph. The 3,000 mile lube change interval may be waived if the rear axle was filled with Ford approved 75W-140 synthetic gear lubricant meeting material specification WSL-M2C192-A, part number F1TZ-19580-B or equivalent. Add 4-ounces of additive Friction Modifier, C8AZ-19B546-A, Ford specification EST-M2C118-A, or equivalent for complete refill of Traction-Lok rear axles, except for F250 LD/HD, F350 and Motorhomes which require 8-ounces of additive.

Maintenance Intervals for Severe Duty Schedule

3,000 MILES (5,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

6,000 MILES (10,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

9,000 MILES (15,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

12,000 MILES (20,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

15,000 MILES (25,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

18,000 MILES (30,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

21,000 MILES (35,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Change automatic transmission fluid.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

24,000 MILES (40,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

27,000 MILES (45,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

30,000 MILES (50,000 Kilometers)

- Change engine oil and replace oil filter.*
- Replace air cleaner filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Inspect exhaust heat shield(s).*
- Inspect front and rear brakes. (1)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

33,000 MILES (55,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

36,000 MILES (60,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

39,000 MILES (65,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

42,000 MILES (70,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Change automatic transmission fluid.*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

45,000 MILES (75,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

48,000 MILES (80,000 Kilometers)

- Change engine oil and replace oil filter.*
- Change engine coolant initially at 48,000 miles (80,000 km) or 48 months. Thereafter, change engine coolant every 30,000 miles (50,000 km) or 36 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

51,000 MILES (85,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

54,000 MILES (90,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

57,000 MILES (95,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

60,000 MILES (100,000 Kilometers)

- Change engine oil and replace oil filter.*
- Replace spark plugs.*
- Inspect accessory drive belts.*
- Replace air cleaner filter.*
- Replace rear axle lubricant.*
- Replace PCV valve — 4.6L engines only. (2)*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Inspect exhaust heat shield(s).*
- Inspect front and rear brakes. (1)*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

63,000 MILES (105,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Change automatic transmission fluid.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

66,000 MILES (110,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

69,000 MILES (115,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

72,000 MILES (120,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

75,000 MILES (125,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

78,000 MILES (130,000 Kilometers)

- Change engine oil and replace oil filter.*
- Change engine coolant every 30,000 miles (50,000 km) or 36 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Rotate tires and adjust air pressure.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

81,000 MILES (135,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

84,000 MILES (140,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Change automatic transmission fluid.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

87,000 MILES (145,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

90,000 MILES (150,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect accessory drive belts (3.8L and 4.6L engines).*
- Replace air cleaner filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*
- Inspect exhaust heat shield(s).*
- Inspect front and rear brakes. (1)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

93,000 MILES (155,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

96,000 MILES (160,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

99,000 MILES (165,000 Kilometers)

- Change engine oil and replace oil filter.*
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Replace PCV valve — 3.8L engines only.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

100,000 MILES (167,000 Kilometers)

- Replace PCV valve — 3.8L engines only.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

102,000 MILES (170,000 Kilometers)

- Change engine oil and replace oil filter.
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

105,000 MILES (175,000 Kilometers)

- Change engine oil and replace oil filter.
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Change automatic transmission fluid.
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

108,000 MILES (180,000 Kilometers)

- Change engine oil and replace oil filter.
- Change engine coolant every 30,000 miles (50,000 km) or 36 months.
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

111,000 MILES (185,000 Kilometers)

- Change engine oil and replace oil filter.
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

114,000 MILES (190,000 Kilometers)

- Change engine oil and replace oil filter.
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Rotate tires and adjust air pressure.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

117,000 MILES (195,000 Kilometers)

- Change engine oil and replace oil filter.
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

120,000 MILES (200,000 Kilometers)

- Change engine oil and replace oil filter.
- Replace spark plugs.
- Inspect accessory drive belts (3.8L and 4.6L engines).
- Replace air cleaner filter.
- Replace PCV valve — 4.6L engines only. (2)
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.
- Adjust clutch by lifting pedal every 3,000 miles (5,000 km).
- Inspect exhaust heat shield(s).
- Inspect front and rear brakes. (1)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

- (1) If your driving habits include continuous stop-and-go driving or driving in hilly areas, more frequent intervals may be required.
- (2) At 60,000 miles (96,000 km) your dealer will replace the PCV valve at no cost except on Canada and California vehicles.

Owner Maintenance Checks

The following lists are vehicle checks and inspections that should be performed by the owner or qualified service technician at the frequencies indicated to help ensure safe, dependable operation of your vehicle.

Any adverse conditions should be brought to the attention of your dealer or qualified service technician for service advice as soon as possible.

These Owner Maintenance Checks are generally not covered by warranties and you may be charged for labor, parts and lubricants used.

When You Stop for Fuel:

- Check the engine oil level.
- Check coolant level in the coolant recovery reservoir.
- Check the windshield washer fluid level.
- Look for low or under-inflated tires.

While Operating Your Vehicle:

- Note any changes in the sound of the exhaust or any smell of exhaust fumes in the vehicle.
- Check for vibrations in the steering wheel. Notice any increased steering effort or looseness in the steering wheel.
- Notice if your vehicle constantly turns slightly or “pulls” to one side of the road.
- When stopping, listen and check for strange sounds, pulling to one side, increased brake pedal travel or “hard to push” brake pedal.
- If any slipping or changes in the operation of your transmission occur, check the transmission fluid level.
- Check automatic transmission P (Park) function.
- Check parking brake.
- Check for fluid leaks under your vehicle (water dripping from the air conditioning system after use is normal).
- Check warning lights and gauges.

At least monthly:

- Check the tire pressure — check tires when cold, not after a long drive.
- Check coolant level in the coolant recovery reservoir.
- Check the operation of all exterior lamps, including the brakelamps, turn signals and hazard warning flashers.

**At least twice a year:
(i.e., every Spring and Fall)**

- Check radiator, heater and air-conditioning hoses for leaks or damage.
- Check the power steering fluid level.
- Check windshield washer spray and wiper operation. Clean wiper blades with clean cloth dampened with washer fluid.
- Check for worn tires and loose wheel lug nuts.
- Check muffler, exhaust pipes, shields and clamps.
- Check headlamp alignment.
- Check the lap-shoulder belts for wear and function.
- Check air pressure in spare tire.
- Lubricate all hinges, checks, latches and all outside key locks.

At least once a year:

- Check engine cooling system, hoses and clamps and check coolant strength.
- Lubricate door rubber weatherstrips.
- Clean the body water drain holes.
- Check the air conditioning system before the warm weather season.
- Check the brake fluid level.
- Clean the battery connections.
- Lubricate the transmission controls and linkage.
- Check manual transmission fluid.

If any of these conditions are noted, bring them to the attention of your dealer or qualified service technician as soon as possible.

